

Gazebo Screen Assembly Manual

Parts



Door Latch with 1" White and
½" White Screws




2 ½" White Head Screws



2" Pan Head Screws





2 ¼" S. S. Screws

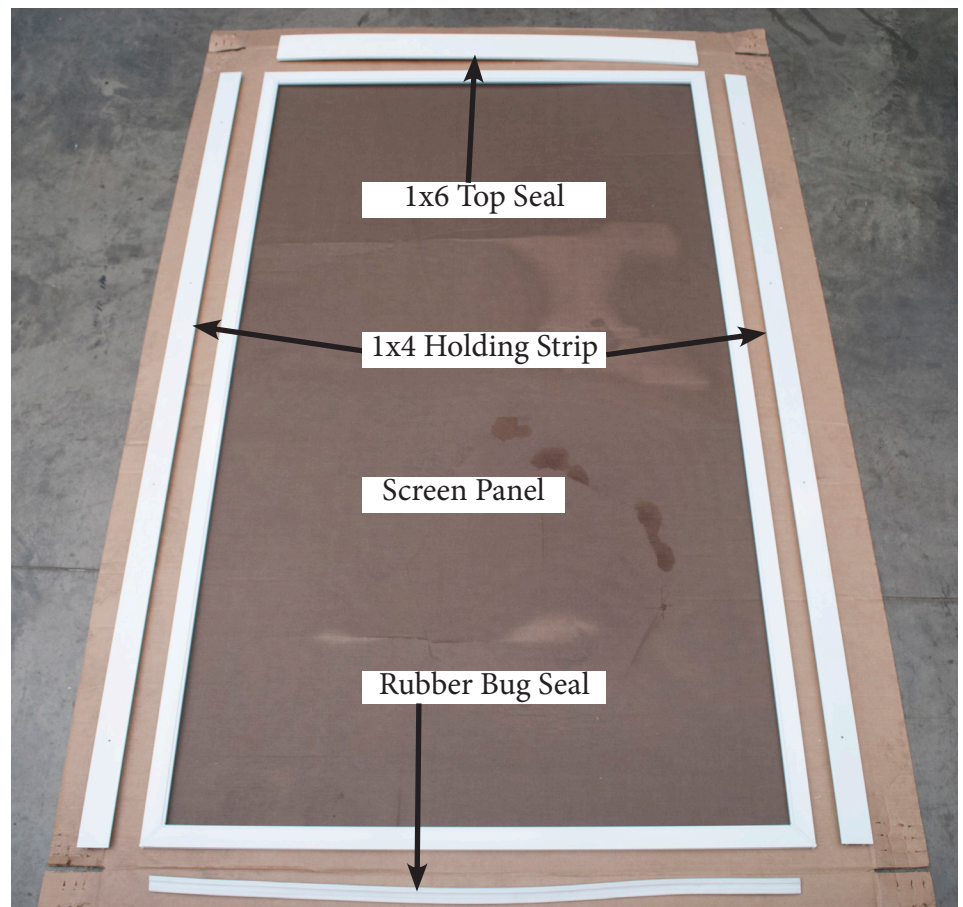

Questions? Issues with Damaged or Missing Parts?

In order to best assist you, please contact YardCraft directly, NOT a third part retailer, with any questions regarding our products, damages, or replacement parts. This will help you get what you need as quickly as possible! Call us at 866-210-9273 or Email us at info@yardcraft.com!

Parts

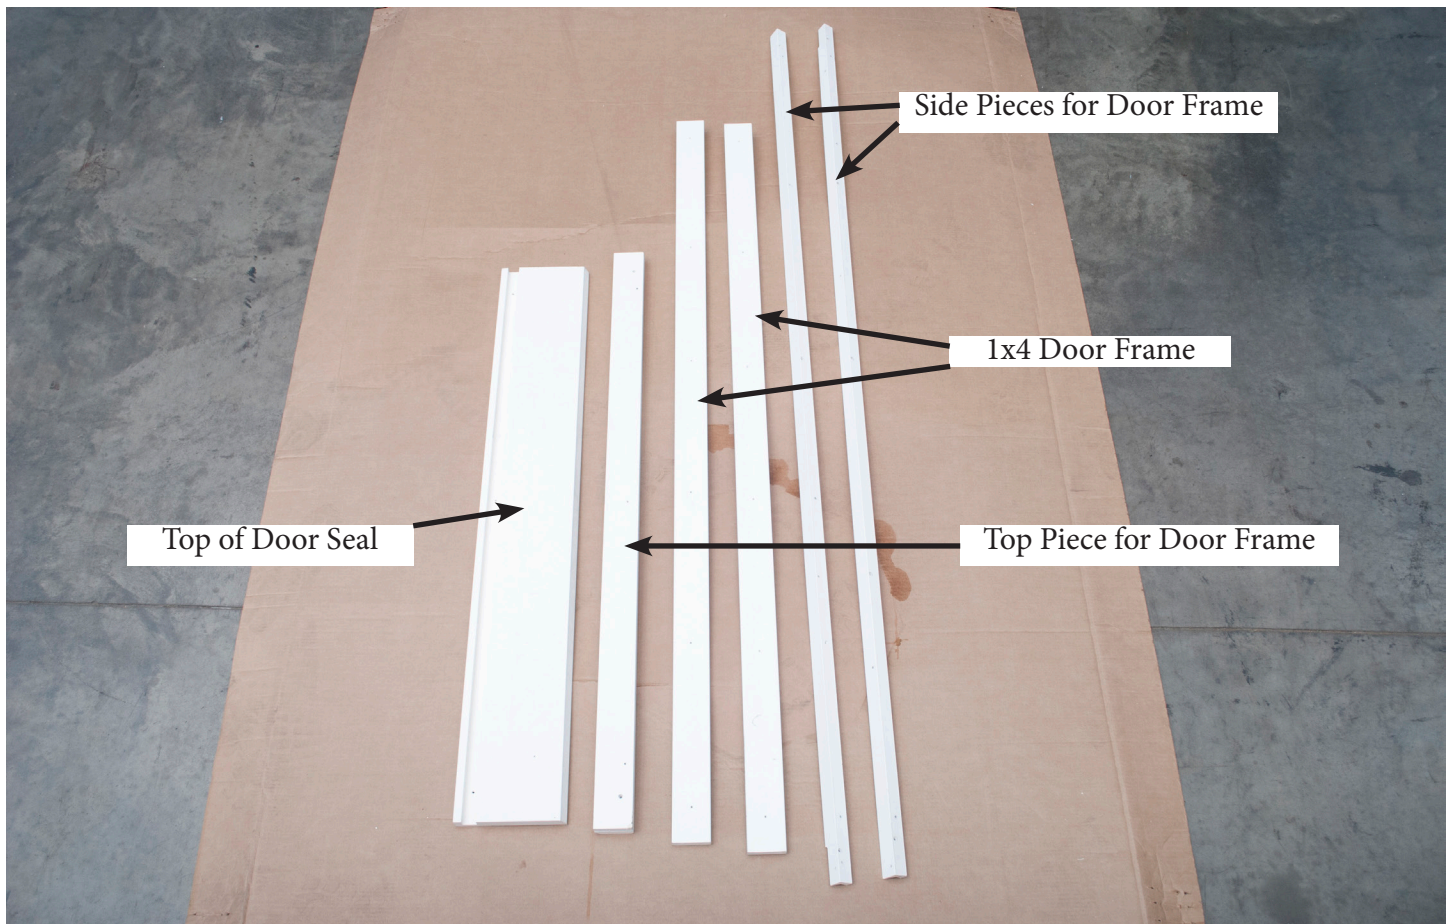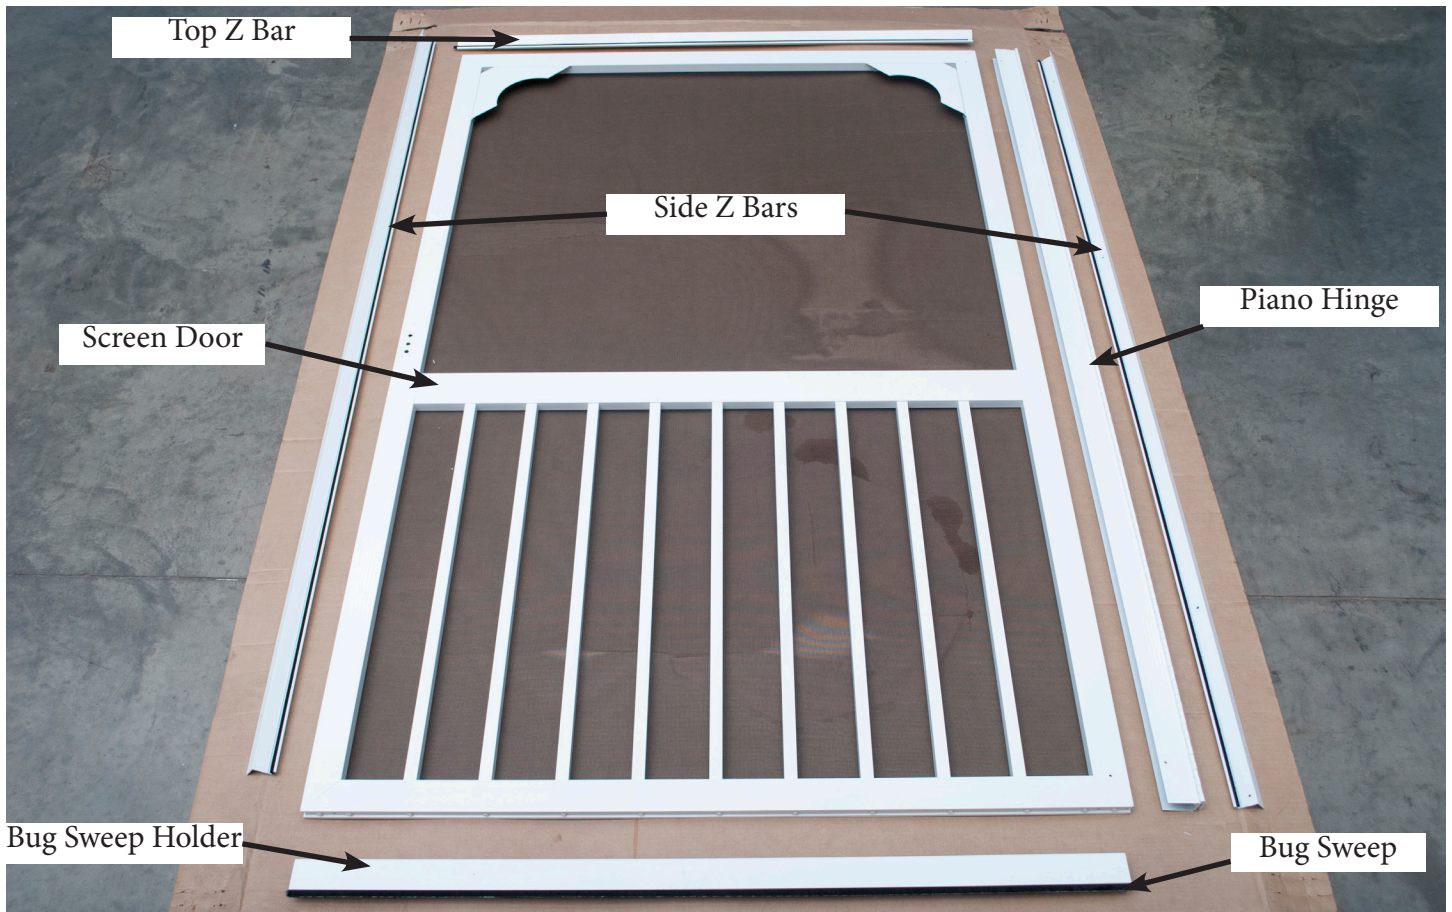


Step # 1



Locate the Screen Panels. Lay on a clean flat surface.

Step # 2

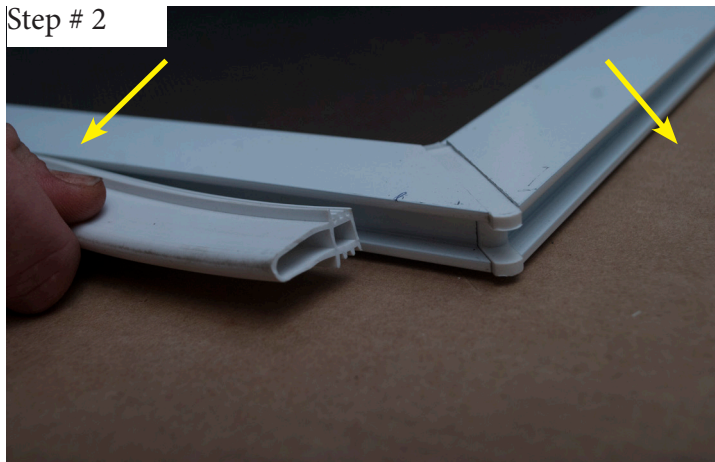


Locate the Rubber Bug Seal. Starting at one end, insert the Rubber Bug Seal in the groove of the Screen Panel.

Step # 3




Work your way across. Be sure to insert all the way in the groove.

Step # 4

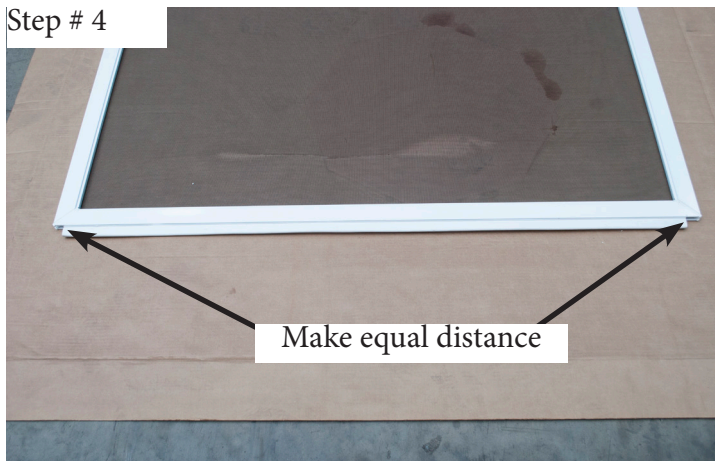

The Rubber bug Seal will be a few inches shorter than the Screen Panel. Slide to create an equal distance at each end.

Step # 5

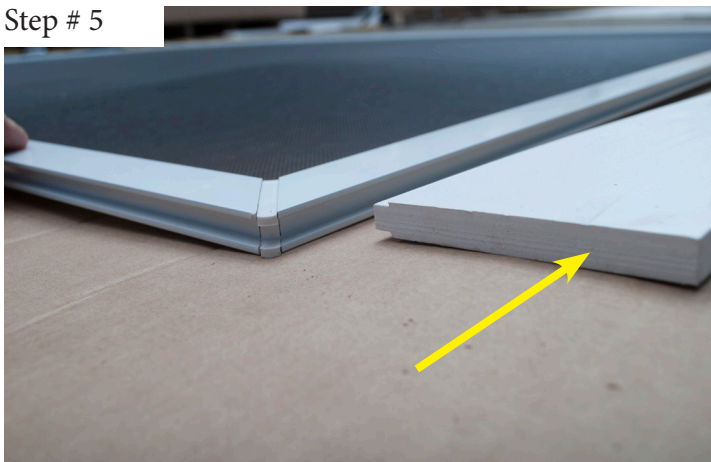


Locate the 1x6 Top Seal.

Step # 6



Starting at one end, insert into the groove of the Screen Panel.

Step # 7

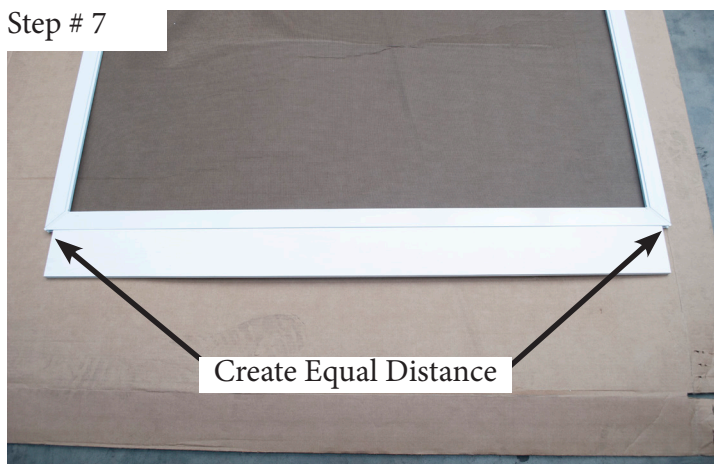

Create equal distance at each end.

Step # 8



Keeping the Top & Bottom Seal in place, Set the Screen Panel Upright.

Step # 9



Place the Top Seal in between the Rafters.

Step # 10



Push the Screen Panel in against the Post at each side. Set the Screen Panel on top of the Post Trim as shown above.

Step # 11



Install the Screen Panel at the next section.

Step # 12



Locate the 1x4 Holding Strip.

Step # 13



Place in against the Post.

Step # 14



Fasten 1x4 Holding Strip to Post with one (1) 2" Pan Head Screw into each pre-drilled hole.

Step # 15




Four (4) 2" Pan Head Screw locations.

Step # 16



Using steps 1-15, install the Screen Panels on all remaining sections.

Step # 17

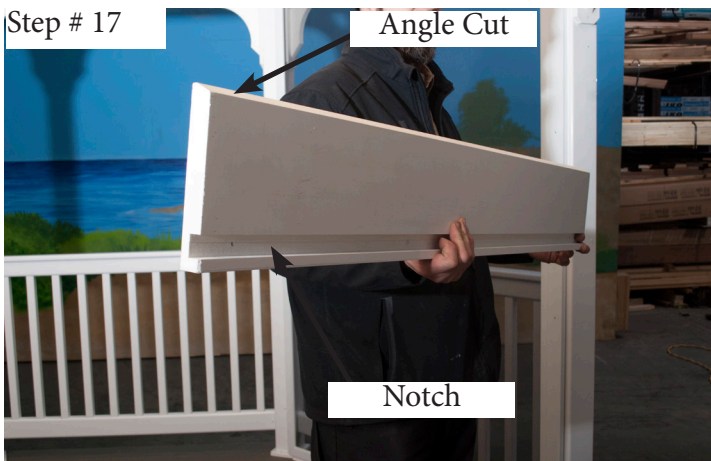

Locate the 1x6 Door Seal. Notice the notch and angle cut.

Step # 18



Place on top of the doorway. Place the notch onto the Vinyl Top Rail.

Step # 19



Fasten with one (1) 2 ½" White Screw into each pre-drilled hole.

Step # 20



Three (3) 2 ½" White Screw locations.

Step # 21



Locate the 1x4 Door Frame

Step # 22



Place onto the post. Align with the outside of the Brace Section.

Step # 23



Fasten to post with one (1) 2 ½" White Screw into each pre-drilled hole.

Step # 24



Six (6) 2 ½" White Screw locations.

Step # 25



Using steps 21-24, install the 1x4 Door Frame on the opposite side of the doorway.

Step # 26



Locate the Side Pieces for Door Frame. Notice the notch on one side. You will have one right hand and one left hand piece.

Step # 27



Fasten with 2 1/4" S S Screws. Notice the direction of the notch.

Step # 28



Six (6) 2 1/4" S S Screw locations.

Step # 29



Locate the Top Piece for Door Frame. Notice the rounded edge on the one side.

Step # 30



Place the Top Piece for Door Frame onto the Top Rail of Gazebo. Ensure the rounded edge is facing up and towards the inside.

Step # 31



Make the Top Piece for Door Frame flush with the bottom of Brace Section on Gazebo. Fasten with one (1) 2 ¼" S S Screw into each pre-drilled hole.

Step # 32



Three (3) 2 ¼" S S Screw locations.

Step # 33



Locate the Top Z Bar.

Step # 34



Push up against the Door Frame.

Step # 35



Fasten the Top Z Bar to the Door Frame with three (3) 1" White Screws.

Step # 36



Locate the Side Z Bars.

Step # 37



Push against the Door Frame. Fasten Side Z Bar to Door Frame with 1" White Screws.

Step # 38



Four (4) Screw locations. Using steps 36 & 37, install the Side Z Bar on the opposite side of doorway.

Step # 39



Locate the Piano Hinge.

Step # 40



Place onto the Side Z Bar.

Step # 41



Fasten Piano Hinge to Side Z Bar with five (5) 1" White Screws.

Step # 42




Locate the Screen Door.

Step # 43



Slide the Screen Door into the Piano Hinge.

Step # 44

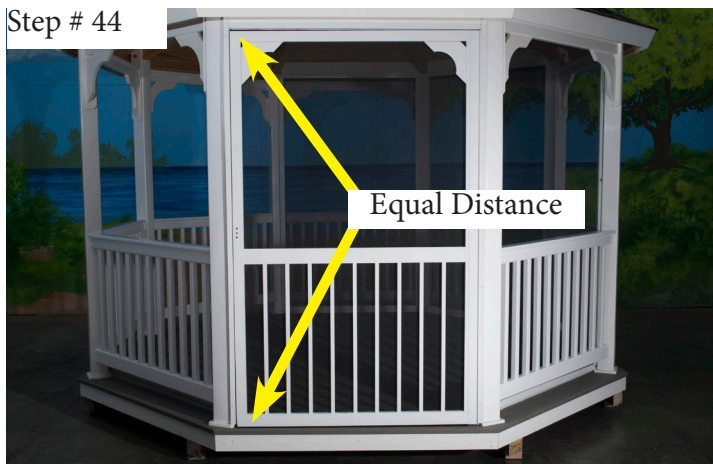

After the Screen Door is in the Piano Hinge, carefully close the door. Center and Square the Screen Door.

Step # 45



Create an equal gap all the way around the Screen Door.

Step # 46



While holding the Screen Door in place, fasten the Screen Door with $\frac{1}{2}$ " White Screws through the Piano Hinge.

Step # 47



Five (5) Screw locations.

Step # 48



Locate the Bug Sweep Holder. Slide the Bug Sweep Holder up into the Screen Door.

Step # 49



Install the Bug Sweep Holder flush with the bottom of the Screen Door.

Step # 50



Fasten the Bug Sweep Holder to the Screen Door with ½" White Screws.

Step # 51



Three (3) Screw Locations.

Step # 52



Locate the Bug Sweep.

Step # 53



Slide the Bug Sweep into the Bug Sweep Holder.

Step # 54



Slide the Bug Sweep all the way across the bottom.

You are now ready to install the Door Latch. Follow the instructions included in the Door Latch Box.



Enjoy your Gazebo!